


MIDO®

SWISS WATCHES SINCE 1918

Baroncelli Automatic Chronograph - Moon phases

User's Manual

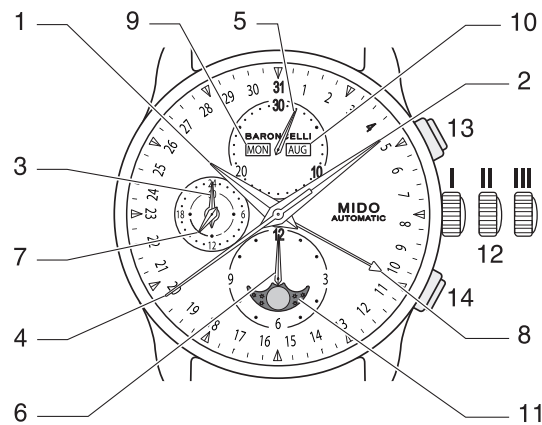

Display and functions

- 1 Hour hand
- 2 Minute hand
- 3 24 hour hand
- 4 60-second chronograph timer
- 5 30-minute chronograph timer
- 6 12-hour chronograph timer
- 7 Second hand
- 8 Date indicator
- 9 Day indicator
- 10 Month indicator
- 11 Moon phase indicator
- 12 Crown for winding, setting the time and date/moon phase
- 13 Chronograph Stop/Start push-button
- 14 Chronograph reset push-button

3 position crown (12)

- I Winding position (not pulled out)
- II Position for setting the date and the month (turn forwards)/
the moon phases (turn backwards) (half pulled out)
- III Position for setting the time and correcting the date and day when midnight is
reached (completely pulled out)

Congratulations

We would like to congratulate you on having chosen a MIDO® automatic chronograph, a Swiss brand among the most highly renowned in the world. In addition to a chronograph's conventional indicators, this model also has a date, day, month, moon phases and 24 hour display. Meticulously assembled using high quality materials and components, your chronograph is protected against impacts, variations in temperature, water and dust. To ensure perfect and accurate operation for many years, we advise you to closely follow the advice given in these instructions.

Technical specifications

MIDO® 1321 calibre (ETA Valjoux 7751 base), Ø 13 1/4" (30.00 mm), thickness: 7.90 mm, 25 jewels, 28,800 vib/h, power reserve approx. 46 hours, INCABLOC and NIVACOURBE anti-shock systems, gold-plated nickel balance, NIVAROX II spiral, NIVAFLEX NO barrel spring, meticulous finish with blued screws, pearl-set bridges, oscillating weight with Geneva stripes and etched MIDO® logo with black fill.

Usage / Settings

Winding

Crown (12) in position **I** (not pulled out)

Your watch has a power reserve of approximately 42 hours. Manual winding is required if you have not worn your watch for this length of time. To reactivate it, you need only turn the crown a few revolutions (forward) or swing your watch from side to side a few times. Around 32 revolutions of the crown (forward) are required to obtain the maximum power reserve.

When wearing your watch, the automatic device winds it every time you move your wrist.

Note: On this automatic model, there is no stop to indicate it is fully wound.

Recommended order for setting your watch

It is recommended that the functions of your watch are set in the following order:

- 1 Correction of the day
- 2 Setting of the time
- 3 Correction of the date and month
- 4 Correction of the moon phase

Correction of the day (9)

Crown (12) in position **III**, completely pulled out

Pull out the crown (12) to position **III** with care; the second hand (3) will stop.

Turn the crown so that the hands turn in a clockwise direction. When the hour hand passes the 12 o'clock position, every 24 hours, the day changes. Make as many turns as required to reach the desired day.

Setting the time

Crown (12) in position **III**, completely pulled out

Pull out the crown (12) to position **III** with care; the seconds hand (3) will stop. Turn the crown forwards or backwards to set the desired time. Once the hour hand passes the 12 o'clock position, you will be able to see whether it is indicating midnight (the date and day will change) or midday (the date will not change).

Advice on how to synchronise your watch

To synchronise the seconds hand (3) with an official time signal (radio/TV/Internet), pull out the crown to position **III**; the second hand will stop. When you hear the audible signal, push the crown back into position **I**.

Correction of the date (8) and month (10)

Crown (12) in position **II**, half pulled out

Pull out the crown (12) to position **II** and turn it forwards until the desired date (8) and month (10) is displayed. During this operation, your watch will continue to function normally, so you will not need to alter the time.

Correction of the moon phase (11)

Pull out the crown (12) to position **II**, and turn it backwards until the desired moon phase (11) is displayed.


Important:

Never set the date and month between 10 p.m. and 2 a.m., the moon phase between 3 and 4 a.m., or the day between 9.30 p.m. and midnight.

Chronograph

Chronograph function

Crown (12) in position **I**, not pulled out

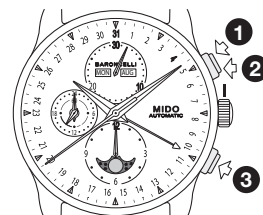

- 1 Press the Start/Stop push-button (13) to start timing.
- 2 Press the Start/Stop push-button (13) to stop timing--> Time readout: **4 hrs, 10 min, 35 s**
- 3 Press the push-button (14) to reset the chronograph hands to zero (4, 5 and 6).

Note: Always stop timing before resetting the chronograph hands.

Care and maintenance

We would advise you to clean your watch regularly (except for the leather strap) using a soft cloth and warm soapy water. After immersion in salty water, rinse it in fresh water and leave it to dry completely.

Do not leave it anywhere where it might be subjected to major variations in temperature or humidity, direct sunlight or strong magnetic fields.

For impeccable maintenance service and for the warranty to remain valid, always consult a MIDO® approved dealer or agent.

The intricately finished mechanism of your MIDO® watch will provide complete satisfaction for many years if you take care of it. However, we recommend you have your watch checked every 3 to 4 years by your MIDO® approved dealer or agent.

	2010	2011	2012	2013	2014	2015
January	● 15 ○ 30	● 4 ○ 19	○ 9 ● 23	● 11 ○ 27	● 1/30 ○ 16	○ 5 ● 20
February	● 14 ○ 28	● 3 ○ 18	○ 7 ● 21	● 10 ○ 25	○ 14 ● 18	○ 5 ● 18
March	● 15 ○ 30	● 4 ○ 19	○ 8 ● 22	● 11 ○ 27	● 1/30 ○ 16	○ 5 ● 20
April	● 14 ○ 28	● 3 ○ 18	○ 4 ● 21	● 10 ○ 25	○ 15 ● 29	○ 4 ● 18
May	● 14 ○ 27	● 3 ○ 17	○ 6 ● 20	● 10 ○ 25	○ 14 ● 28	○ 4 ● 18
June	● 12 ○ 26	● 1 ○ 15	○ 4 ● 19	● 8 ○ 22	○ 13 ● 27	○ 2 ● 16
July	● 11 ○ 26	● 1/30 ○ 15	○ 3 ● 19	● 8 ○ 22	○ 12 ● 26	○ 2/31 ● 16
August	● 10 ○ 24	○ 13 ● 29	○ 2/31 ● 17	○ 6 ○ 21	○ 10 ● 25	○ 14 ○ 29
September	● 8 ○ 23	○ 12 ● 27	○ 16 ○ 30	○ 5 ○ 19	○ 9 ● 24	○ 13 ○ 28
October	● 7 ○ 23	○ 12 ● 26	○ 15 ○ 29	○ 5 ○ 18	○ 8 ○ 23	○ 13 ○ 27
November	● 6 ○ 21	○ 10 ● 25	○ 13 ○ 28	○ 3 ○ 17	○ 6 ● 22	○ 11 ○ 25
December	● 5 ○ 21	○ 10 ● 24	○ 13 ○ 28	○ 3 ○ 17	○ 6 ● 22	○ 11 ○ 25

● New moon

○ Full moon